


NOTES

### TAPING SUBSTRATE SHEETS

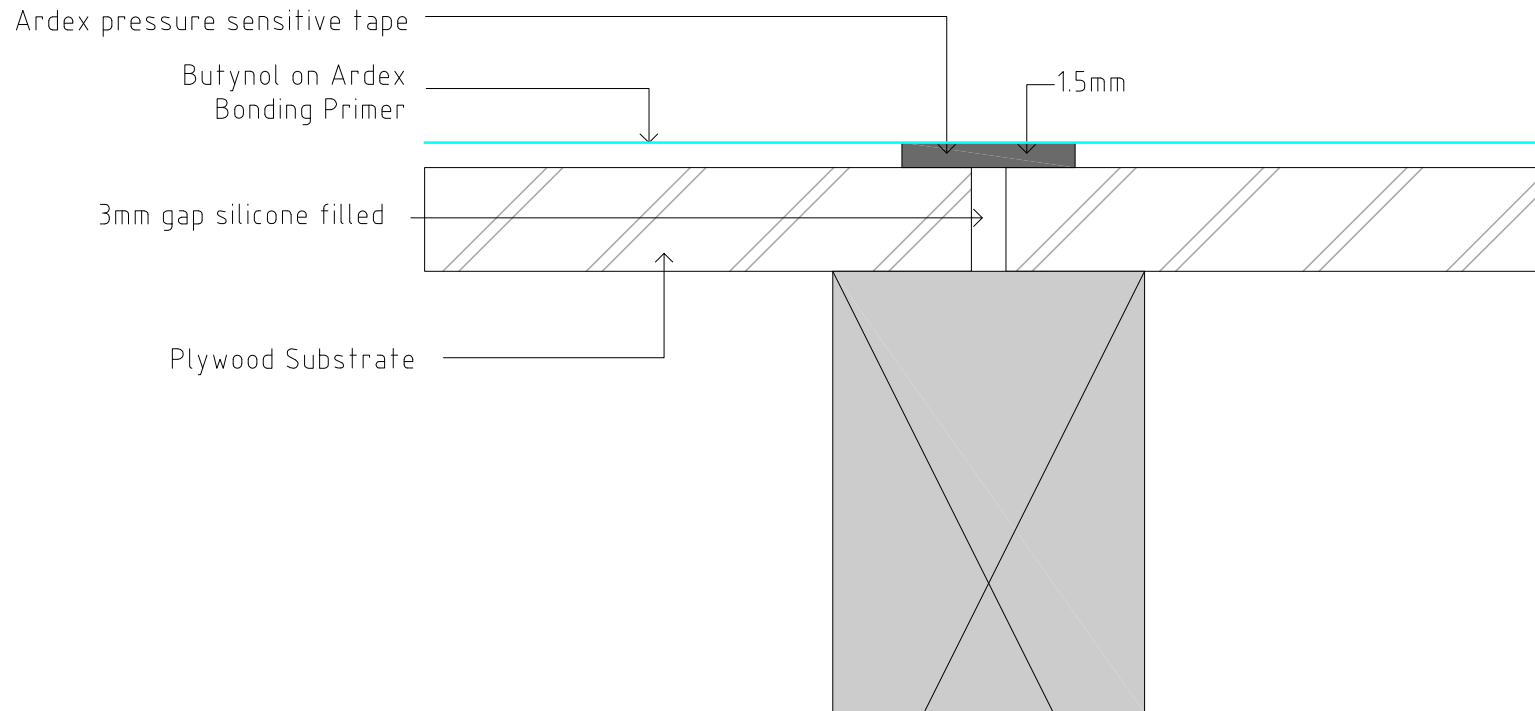

All joints between substrate sheets of Ply should be taped to prevent stressing of the Butynol in case of marked timber movement.



The technical details, recommendations & other information contained in this drawing is given in good faith & represents the best of our knowledge and experience at the time of design. It is your responsibility to ensure that our products are used used correctly in accordance with any applicable Australian Standard, our instructions & recommendations are only for the uses they are intended. We also reserve the right to update information without prior notice to reflect our ongoing research and development program.  
Country specific recommendations, depending on local standards, codes of practice, building regulations and industry guidelines may effect specific installation recommendations.  
The supply of our products and services are also subject to certain terms, warranties & exclusions which are available to you on request.

|           |                              |   |
|-----------|------------------------------|---|
| FILE NAME | ButynolTapingSubstrateSheets | ARDEX AUSTRALIA<br>www.ardexaustralia.com |
| DRAWN     | 31/03/2015 by MZ             |   |
| CHECKED   | 08/04/2015 by TSD            | SCALE NTS                                 |
| SIZE      | A4                           | DRAWING CODE BTSS                         |